

EVAsubaqua



UPDATE FIRMWARE

A step-by-step guide to updating the firmware

TABLE OF CONTENTS

1	Firmware EVAsubaqua	3
2	Verbind de EVA 4CH LED driver via Wi-Fi	3
2.1	Preparation	3
2.2	4CH-driver	3
2.3	Wi-Fi connection	4
2.4	Prepare for update	5
2.5	Reconnect Wi-Fi	5
2.6	Select a file	6
2.7	Switch off Wi-Fi on the 4CH-driver	6

1. FIRMWARE EVASUBAQUA

As EVA continues to innovate, firmware updates are available. These firmware updates are not installed automatically and are not mandatory, but they can easily be updated manually via our website, and can only be installed locally on our products. The instructions for performing a firmware update are provided below:

If you have a direct connection with the 4CH driver, it will not be possible to connect to another device or internet.

2. CONNECT THE EVA 4CH LED DRIVER VIA WI-FI

1. Preparation

Download the firmware. Save the firmware (xxx.bin or .zip) locally on your tablet or laptop/ computer and unzip the file.

We recommend using a tablet, laptop or a PC. A phone screen is too small.

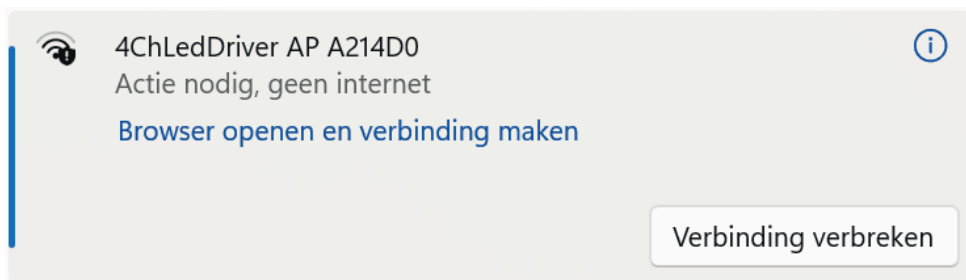


2. 4CH-driver

To connect with the 4CH driver to Wi-Fi, set the “ENA WIFI” dip switch ON.

When the switch is ON, the light turns green and orange, indicating that the device is in slave mode.

* After a period of time (approximately 5 – 7 minutes), the connection may be lost. The Wi-Fi will then be disconnected and the light will turn red. When the light is red, switch the dip switch off again and then back on.



3. Wi-Fi connection

You will see “4CHLedDriver xxxxx” in your Wi-Fi connections.

Make a direct Wi-Fi connection with the 4CH driver, and select ‘connect automatically’.

Once connected, a pop-up screen with the EVA logo will automatically appear.

If the pop-up screen doesn’t appear, open a browser and type “192.168.4.1” in the address bar, and press enter to open the Web app.



 
Once the EVA logo appears on the pop-up screen, click ‘continue’ on the bottom of the screen.

 
You will see a group with 1 or more drivers (depending on whether the board is master or slave).

 


On the screen that opens, you can select the arrow at the top right on the screen.

Manage Drivers

Update firmware: 

Distribute firmware to all drivers: 

Current Firmware Version: 2219 

Driver 14A214D0 

 
4. Prepare for update

The screen for managing the drivers opens. Select 'Prepare for update' and 'confirm'.



4ChLedDriver AP A214D0
Actie nodig, geen internet
[Browser openen en verbinding maken](#)





5. Reconnect Wi-Fi

The 4CH will restart in preparation for the update, which may cause the connection to be temporarily lost.

After preparation, check whether the connection has been lost. If so, the Wi-Fi connection must be re-established. This usually happens automatically, but in some cases you may need to reconnect manually.

You can reconnect once the green and orange indicator lights are back on.

Manage Drivers

Update firmware:

Distribute firmware to all drivers:

Current Firmware Version: 2219

Driver 14A214D0

Select a file

Distribute Firmware

Show only outdated (0)

6. Select a file

Once connected, reload the page, then click ‘Continue’ and press the arrow button again.

Press on “Select a file” and select the downloaded new firmware file: “4CHLedDriver xxxx”.

Once the firmware has been uploaded and installed, check your connection and then verify that the update has been successfully installed.



7. Switch off Wi-Fi on the 4CH-driver

After successfully updating, switch off the ENA WIFI switch.

The green indicator light will then turn on.



EVA Tech B.V.
De Velde 1
8064 PH Zwartsluis
The Netherlands
+31 (0)38 - 33 75 067
info@evaoptic.com
evaoptic.com